

# **CHESTPAD**








#### **PRODUCT DESCRIPTION**

The Chestpad is the main supporting element of the Kera sit2sit. The Backstrap pulls the user into the Chestpad, and these two elements combined hold the user's torso securely with enough grip to lift them from their seat.

The Chestpad consists of a core plate with a foam core adhered to it and a 4-way stretch medical grade vinyl covering. The foam core is 90mm thick of varying density, high quality foam layers. The foam solution is designed to be a balance of physical support and user comfort.

### **COMPONENTS**

The Chestpad Assembly (as shown) consists of the Chestpad, Sliding Connector, Cradle Brackets, Cradle Cover and Rubber Grip.

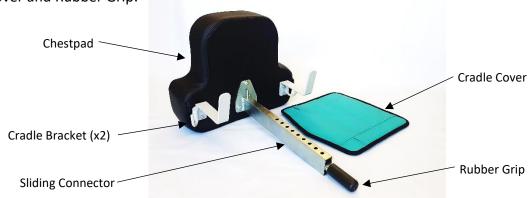

The Sliding Connector and Cradle Brackets mount to threaded inserts in the core plate. The Cradle Cover slides onto the Cradle Brackets. The rubber grip slides onto the end of the Sliding Connector.

All components can be ordered individually as replacements for lost or damaged items on the Chestpad assembly.

## HT Systems

## KERA SIT2SIT - ACCESSORY INFORMATION - CHESTPAD

#### **CHESTPAD SIZES**

The Chestpad comes in three sizes to suit a range of user requirements.

All sizes have the same Sliding Connector and Cradle Hooks and Cradle Cover and can be used with the standard Backstrap and Thighstrap.



	Standard	Short	Petite
	Largest and most comfortable pad suitable for most users	Shortened in height for users who are shorter or who have reduced neck control	Petite size for smaller users or children. Reduced width for narrow armrests
User height	~140-190cm	~100 -140cm (acceptable up to 190cm for user with reduced neck control)	~100-150cm
User weight	Up to 120kg	Up to 120kg	Suggested up to 60kg
Chestpad	Width = 40cm* *(will compress to 38cm)	Width = 40cm* *(will compress to 38cm)	Width = 31cm* *(will compress to 30cm)
<u>Dimensions</u>	Height = 35cm Thickness = 11cm	Height = 27cm Thickness = 11cm	Height = 27cm Thickness = 11cm

<sup>\*</sup>the edges of the Chestpad are soft foam and will compress easily to the minimum width stated.

<u>The Standard Chestpad</u> is the largest and most comfortable pad and is suitable for most adult users. It is designed for users of height between 140cm-190cm tall and weighing up to 120kg. Its maximum width will fit between the arms of most adult sized wheelchairs on the market. Its height is designed to be able to comfortably support a person who is 190cm tall, while not being too tall for a person who is 140cm tall.

<u>The Short Chestpad</u> has similar dimensions to the Standard Chestpad, but its height is reduced by 8cm. The Short model best suits a shorter person or someone with limited head control whose chin would sit on the top of the Chestpad, or face would slump forward into the top. For more examples relating to head control see User Cases at <a href="https://www.htsystems.co.nz/user-cases">www.htsystems.co.nz/user-cases</a>.

<u>The Petite Chestpad</u> is designed for small users of height between 100-150cm, who are potentially sitting in a child sized wheelchair with narrow arm rests. It is narrower and has smaller side cushions to ensure a better fit for a small chair. As the padded area is smaller in the Petite model, the recommended maximum weight is 60kg to ensure suitable comfort.

## KERA SIT2SIT - ACCESSORY INFORMATION - CHESTPAD



#### **SCRIPTING A CHESTPAD SIZE**

- -The Standard Chestpad will work for most adults between 140-190cm and any weight up to 120kg.
- -The Petite Chestpad is most suitable for children or small adults of height 100-140cm and less than 60kg.
- **-The Short Chestpad** may be required when an adult is greater than 60kg but less that 140cm or has limited neck control or ability to straighten their back to allow their chest to be engaged by the Chestpad.

To determine if the Short Chestpad is required, measure between the user's lap and chin in the position they would be in as the Kera is engaged with them or when they are sitting up as straight as possible. The following image shows how to take this measurement:

If this measurement is **greater than 35cm**: the **Standard Chestpad** is recommended.

If this measurement is **less than 35cm**: a **Short Chestpad** is recommended.

If this measurement is **less than 27cm**: **contact HT Systems** to discuss the suitability of the Kera sit2sit.



#### **REMOVING AND INSTALLING THE CHESTPAD**

The Cradle Cover can be removed from the Cradle Brackets to make this process easier. Pull the top corners of the Cradle cover upward to slide it off.

To remove the Chestpad:

- Remove the Rubber Grip front the rear of the Sliding Connector.
- Pull up the Indexing Pin and slide the Chestpad from the Hub, such that the Chestpad is seperate.

#### To install the Chestpad:

- When sliding the Sliding Connector into the Hub, be careful not to dislodge the adhesive plastic strips on the inside surfaces of the Hub. Pull up the Indexing Pin and slide the Chestpad into the Hub.
- Replace the Rubber Grip on the Sliding Connector. A small amount of water inside the rubber grip can make it easier to replace the grip. Replace the Cradle Cover.



## KERA SIT2SIT - ACCESSORY INFORMATION - CHESTPAD



#### CONFIGURABLE CHESTPAD ACCESSORY

The Configurable Chestpad accessory for the Kera sit2sit features a modular foam core designed to create reduced-pressure zones for users with an SPC, PEG, or stoma bag.

**Sizes:** The Configurable Chestpad is available in Standard and Short sizes.

The cover of the Configurable Chestpad unzips across the top edge, providing easy access to configurable foam core. Removable foam elements, secured with Velcro, can be repositioned or removed as needed.







There are three removable foam elements, a central wedge and two side sections.

For example, if a user has a centrally located PEG, the central foam wedge can be removed to create a reduced-pressure zone in the centre.

Similarly, one or both side foam pieces can be removed or adjusted to accommodate an SPC or stoma bag.



#### **CUSTOMISATION AND MODIFICATIONS**

Additional elements for and customisations to the Chestpad can be made in order to facilitate its success for a client and their specific needs, for example, and head rest can be added to the Chestpad to control the users head when being transferred.

For custom modifications, contact HT Systems to discuss the suitability of adding the custom component and design guidelines for its attachment.